
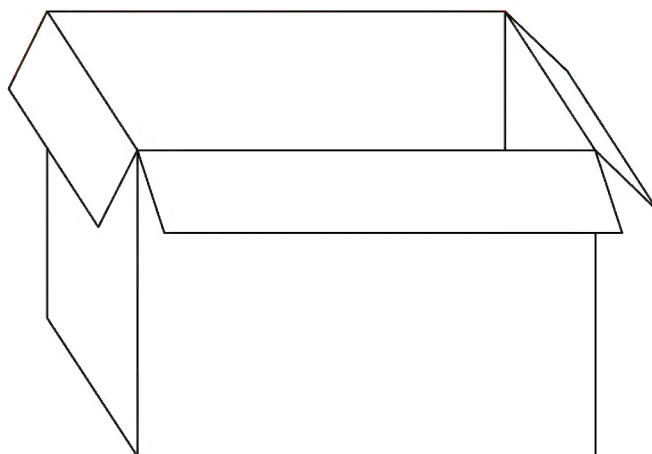


MODEL: 93084  
PACKING DIAGRAM

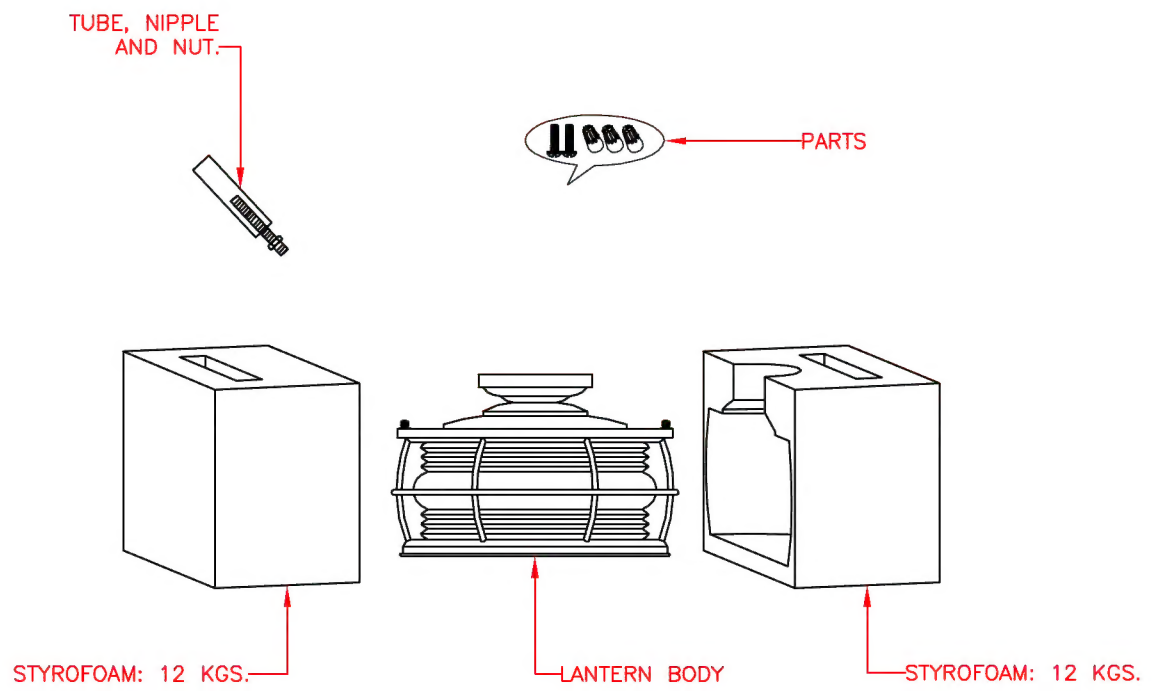

MODEL: 93084AI

## ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FIXTURE SHOULD TAKE APPROXIMATELY 15 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

**TOOLS:** YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS.

### UNPACK THE FIXTURE

YOU SHOULD HAVE RECEIVED THE FOLLOWING:


LANTERN BODY, LONG NIPPLE, (2) CAPS AND TUBE. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

### MOUNTING HARDWARE PACKAGE:

MOUNTING PLATE, (4) MOUNTING SCREWS, (2) 8-32 x 1-1/4" SCREWS AND (3) WIRE CONNECTORS.


### FLUSHMOUNT ASSEMBLY

1. REMOVE ROOF FROM THE LANTERN CAGE BY UNSCREWING TWO FINIALS.
2. INSTALL A 100-WATT MAX., MEDIUM-BASE, TYPE A BULB (NOT INCLUDED) INTO THE SOCKET.
3. SECURE THE ROOF TO THE LANTERN CAGE WITH TWO RUBBER WASHERS AND TWO FINIALS REMOVED ABOVE.

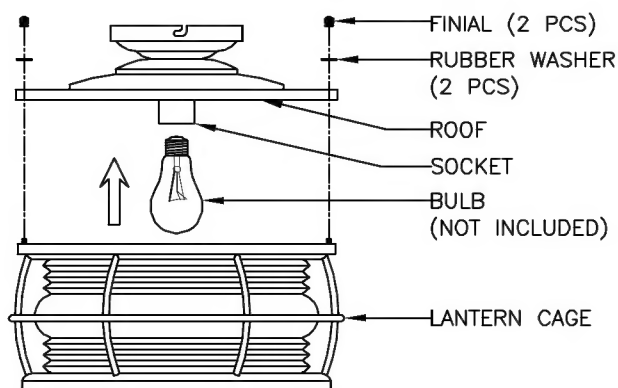

### SEMI-FLUSHMOUNT ASSEMBLY

1. REMOVE ROOF FROM THE LANTERN CAGE BY UNSCREWING TWO FINIALS.
2. REMOVE METAL WASHER AND CANOPY FROM THE ROOF BY UNSCREWING NUT.
3. REMOVE NIPPLE FROM THE ROOF BY UNSCREWING THE NIPPLE.

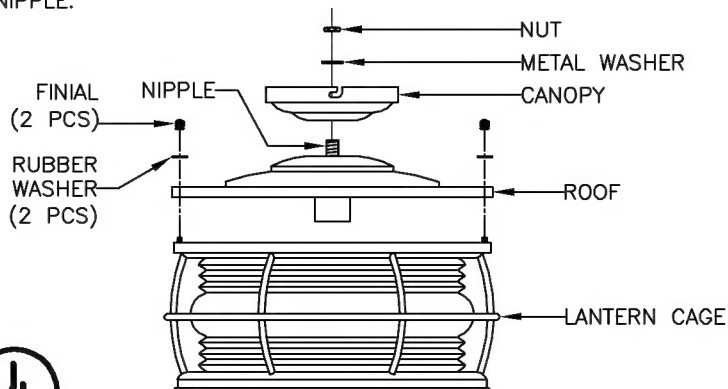


4. PLACE CAP ONTO THE ROOF, THEN SCREW THE LONG NIPPLE TO TOP OF THE ROOF.

5. SLIDE TUBE, CAP AND CANOPY OVER THE LONG NIPPLE, AND SECURE WITH METAL WASHER AND NUT.

6. INSTALL A 100-WATT MAX. MEDIUM-BASE TYPE A BULB (NOT INCLUDED) INTO THE SOCKET.


7. SECURE THE ROOF TO THE LANTERN CAGE WITH TWO RUBBER WASHERS AND TWO FINIALS.

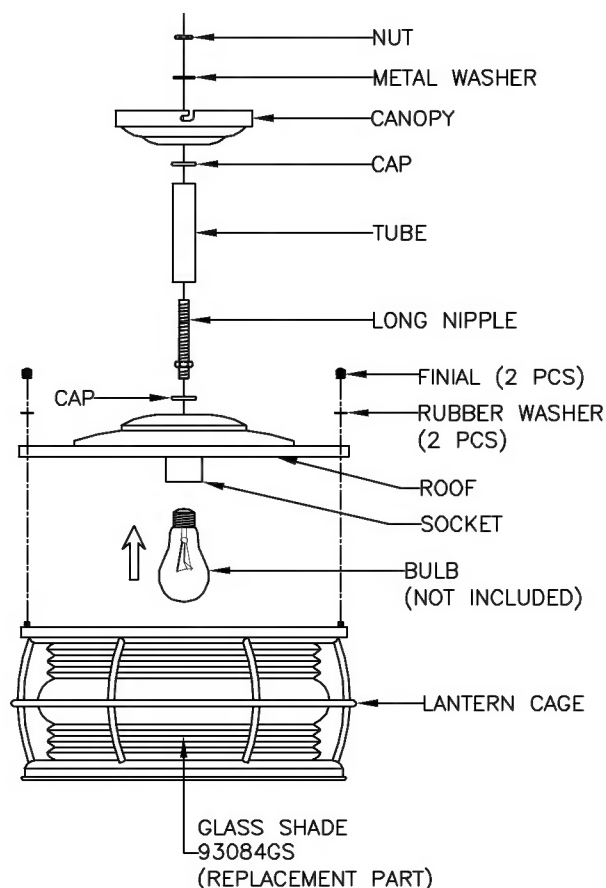

COMPLETE INSTALLATION INSTRUCTIONS ON NEXT PAGE.

AVAILABLE PART IS:  
93084GS (GLASS SHADE)



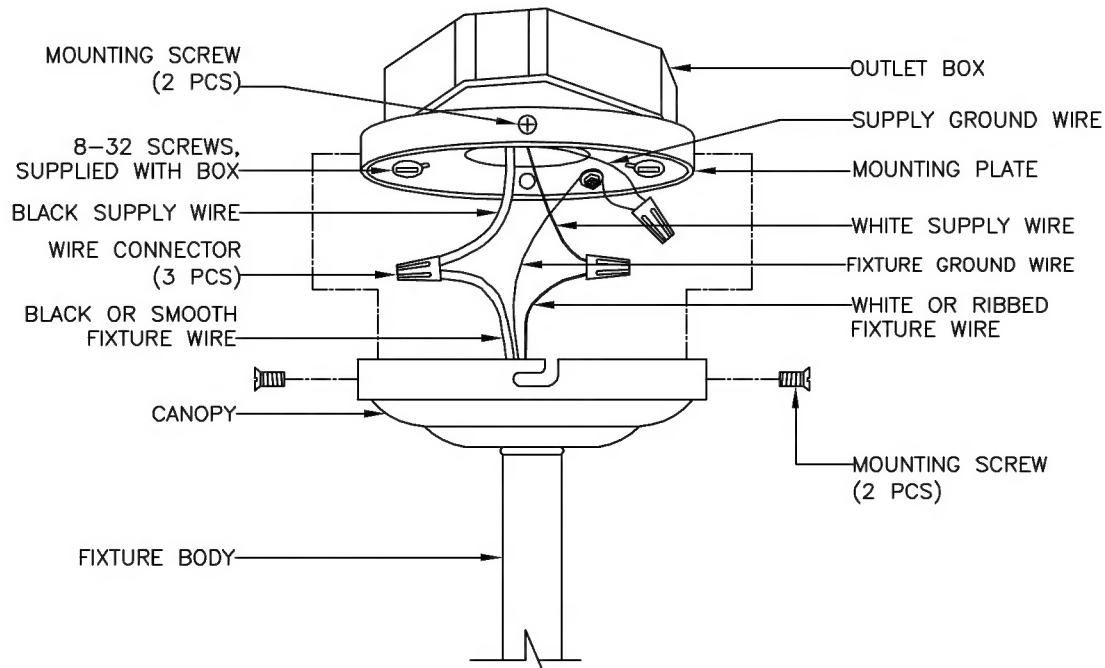

## INSTALLATION INSTRUCTIONS

### READ AND SAVE THESE INSTRUCTIONS

#### **CAUTION**

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

\* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

\*\* IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

\*\*\* THIS FIXTURE IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

#### **COMPLETE FIXTURE ASSEMBLY INSTRUCTIONS FIRST (SEE PREVIOUS).**

1. SCREW TWO MOUNTING SCREWS INTO THE HOLES IN THE MOUNTING PLATE, ATTACH THE MOUNTING PLATE TO THE OUTLET BOX USING THE OUTLET BOX SCREWS. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1-1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).
2. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTORS PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE MOUNTING PLATE THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTOR PROVIDED.
3. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.
4. RAISE THE FIXTURE TO THE CEILING, AND HOOK CANOPY TO THE MOUNTING SCREWS, TWIST THE CANOPY CLOCKWISE TO SECURE THE CANOPY TO THE MOUNTING SCREWS.
5. SECURE THE CANOPY TO THE CEILING BY TIGHTENING THE FOUR MOUNTING SCREWS.
6. RESTORE POWER, YOUR NEW FIXTURE IS NOW READY FOR USE.

